



Note: When installing TS4-R or TS4-R-Duo, connect the input cables to the PV module before connecting the TS4-R output cables in series.

If disconnecting TS4-R or TS4-R-Duo, disconnect the TS4-R output cables from the string before disconnecting the input cables from the PV module.



support.tigoenergy.com



support@tigoenergy.com



International: 00800.2255.8446
Americas: +1.408.402.0802 #2



Manual



IMPORTANT NOTICE

Electricity will be supplied to the Tigo TS4-R output cables immediately when connected to a solar module exposed to sunlight. Use care when handling.

注意事项

当连接的组件暴露在阳光下时电力将会从Tigo TS4-R输出端输出。请小心处理。

ATTENTION!

Une fois connecté au panneau solaire exposé au soleil, les boîtiers Tigo TS4-R laisseront passer le courant. Soyez vigilant.

WICHTIGER HINWEIS

Bei Verbindung der Tigo TS4-R mit einem aktiven Solarmodul steht der Ausgang unmittelbar unter Spannung. Bitte Vorsicht im Umgang.

AVVISO IMPORTANTE

Prestare la massima attenzione: i cavi di uscita dei Tigo TS4-R sono già alimentati con energia elettrica quando vengono collegati a un modulo solare esposto alla luce del sole.

안전을 위한 주의사항

햇빛에 노출된 태양전지 모듈에 연결하면 Tigo TS4-R 출력 케이블에 즉시 전기가 흐르게 됩니다. 취급시 주의하십시오.

重要事項

日射下の太陽光モジュールを接続すると同時に、タイゴTS4-Rの出力ケーブルにも電気が流れますので、取扱いには十分ご注意ください。

¡PRECAUCION!

Al momento de conectar los cables de salida los Tigo TS4-R a un panel fotovoltaico expuesto al sol, se iniciará la corriente eléctrica. Tenga cuidado en su manejo.